



wedi Fundo Rinnenrahmen

wedi Fundo channel frame | wedi Fundo cadre de canal

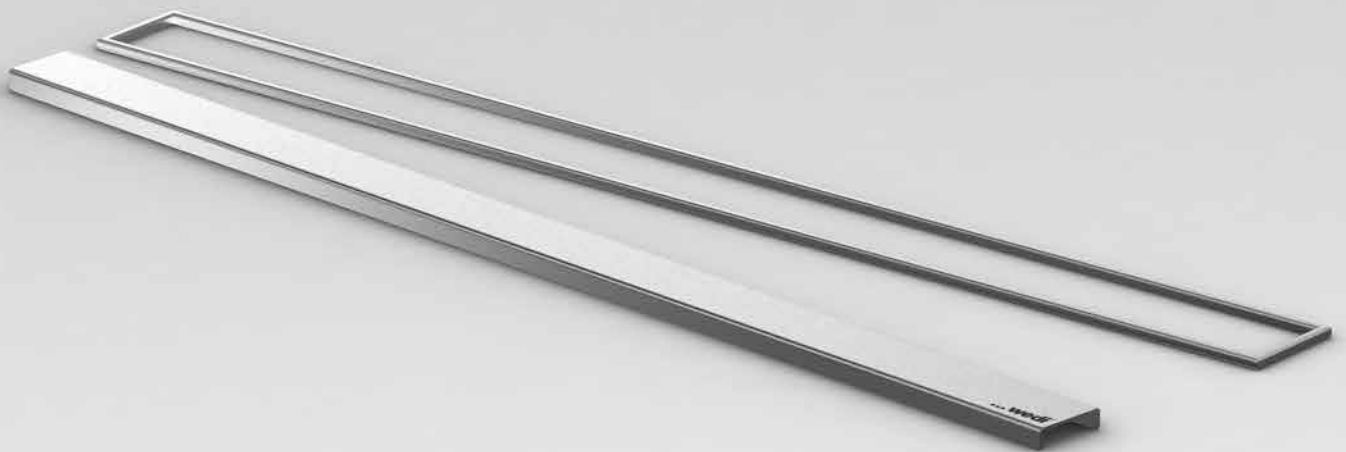

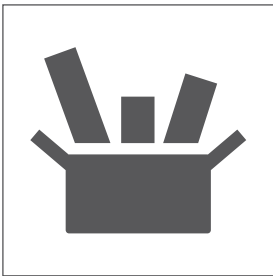


...wedi®




...wedi®



...wedi®

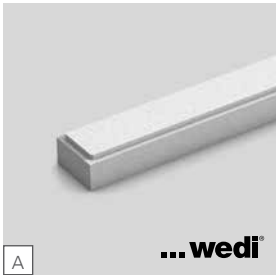

...wedi®

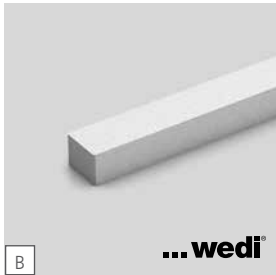

...wedi®



...wedi®



...wedi®






...wedi®



...wedi®



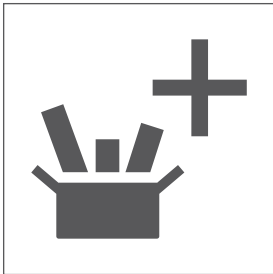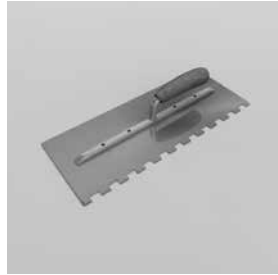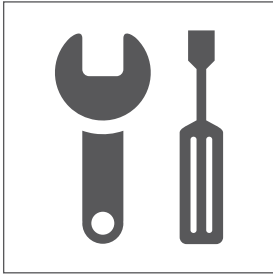

...wedi®



...wedi®






...wedi®







...wedi®



- DE** Schutzfolie vor der Montage entfernen und eventuelle Klebereste mit geeignetem Reiniger (z. B. Spiritus) entfernen.
- EN** Remove the protective film before installation and use a suitable cleaner (e.g. methylated spirits) to remove any adhesive residue.
- FR** Retirer le film de protection avant le montage et enlever d'éventuels résidus de colle avec un nettoyant adapté (par ex. alcool ménager).
- IT** Prima del montaggio staccare il film protettivo e rimuovere eventuali residui di colla con un detergente adatto (per es. alcol).
- NL** Trek de beschermfolie vóór de montage eraf en verwijder eventuele lijmresten met een geschikt reinigingsmiddel (bijv. spiritus).

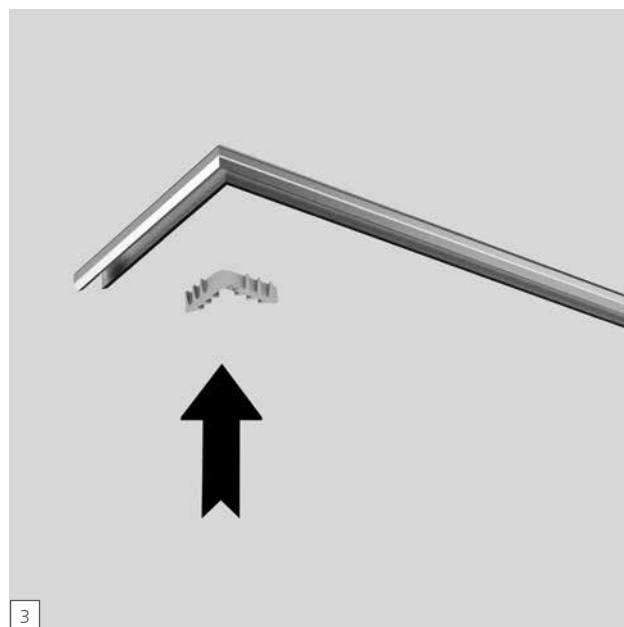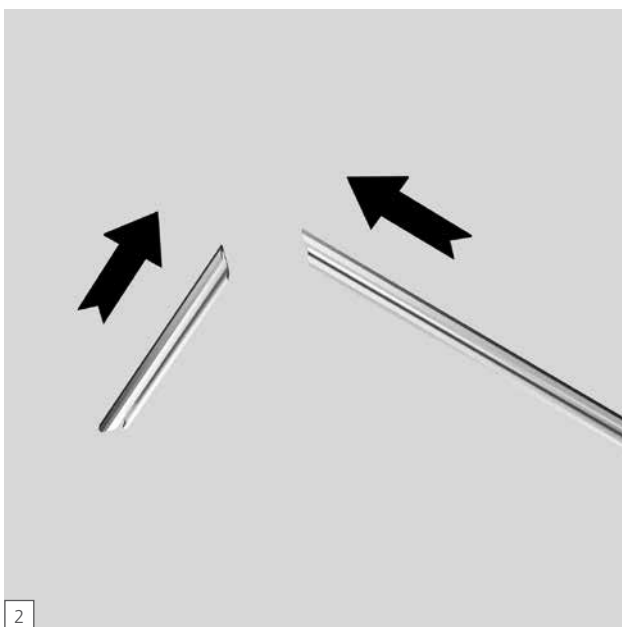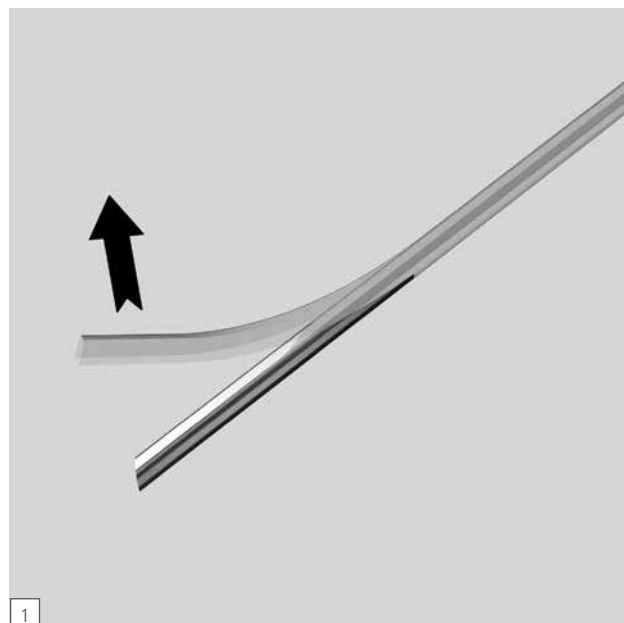

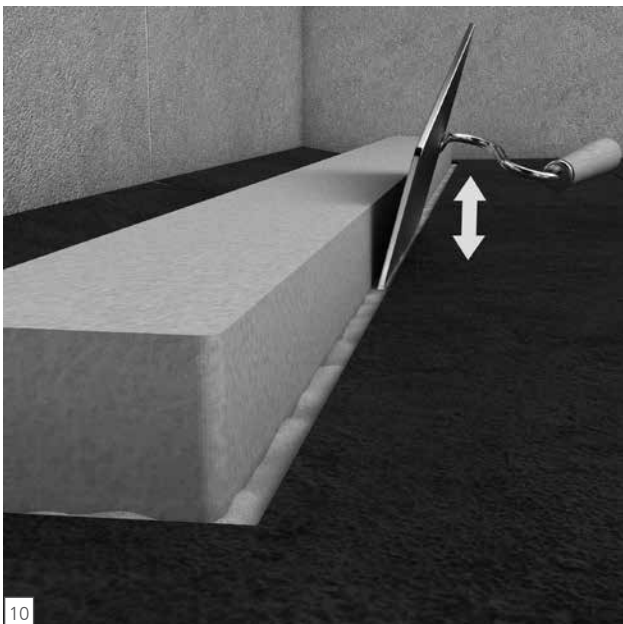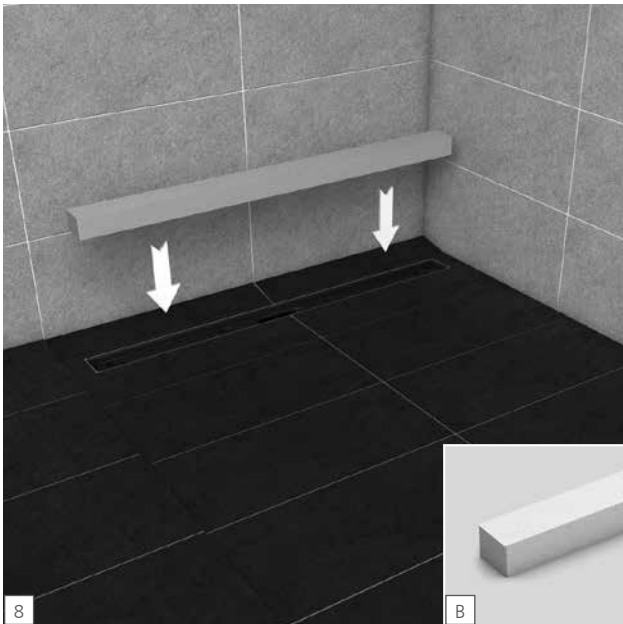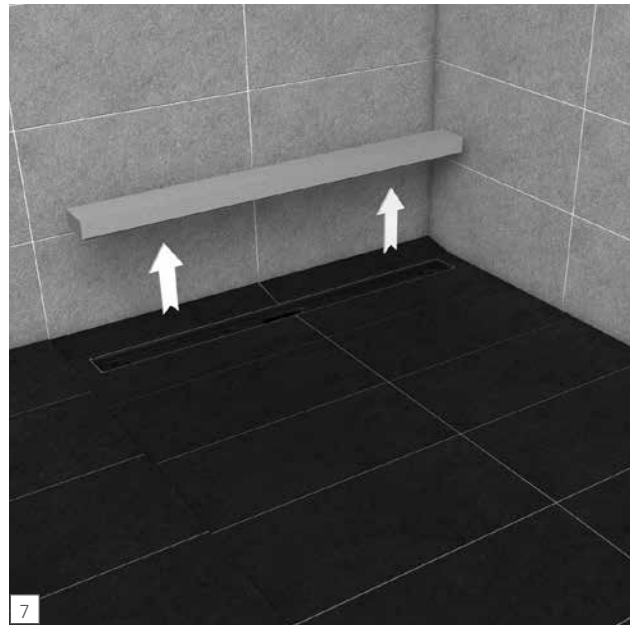

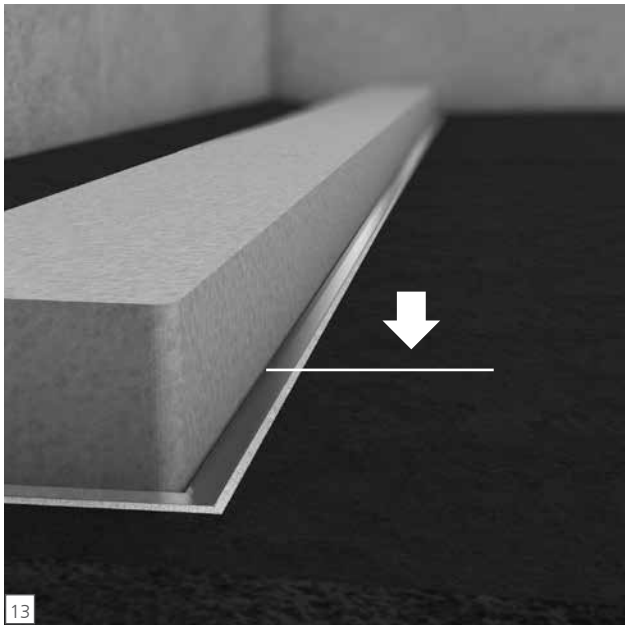



wedi GmbH

Hollefeldstraße 51
48282 Emsdetten
Deutschland

Telefon +49 25 72 156-0
Telefax +49 25 72 156-133

info@wedi.de
www.wedi.eu